


RNT 2700 SERIES

QUICK INSTALL GUIDE

DESCRIPTION

The RNT will answer all incoming calls on the programmed number of rings and play the pre-recorded phone message on the phone line (it will also be played on the 8 and 600 ohm outputs). After playback of the message, the RN disconnects from the phone line. The unit will also detect "winks" from the phone company central office indicating that the caller has hung up. The RN will then end message playback and disconnect from the line.

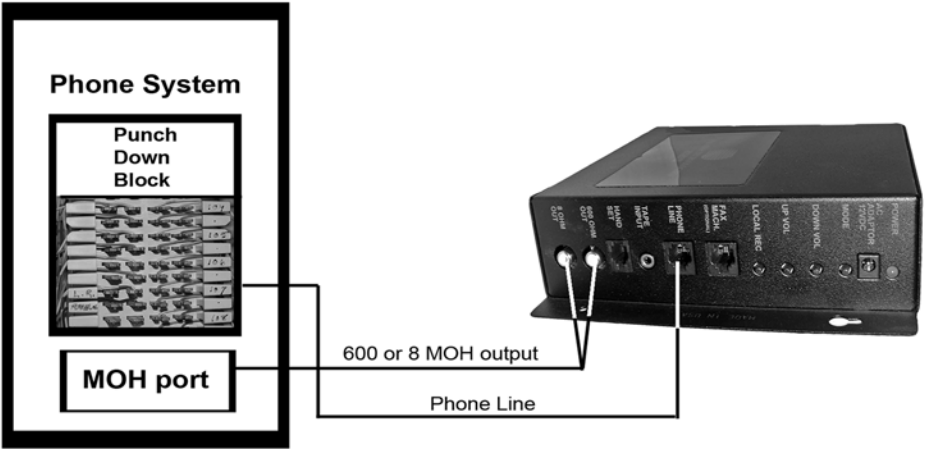

INSTALLATION INSTRUCTIONS

- 1.) Connect RNT to the phone line it will be answering. Make sure no other products, such as modems or faxes are connected to this line.
- 2.) Connect AC adaptor to a suitable 120VAC outlet and the other end into the 12VDC jack on the side of the unit.
- 3.) Turn down the volume by pressing and holding the "Down Vol" button for several seconds.
- 4.) Connect a cable (provided) from the music on-hold input of the phone system to the 600 or 8 ohm output of the RN. The 8ohm output is amplified for systems that require amplification. (Try the 600 ohm first if unsure which to use.)

NOTE: Output volume control is digital for the 8 and 600 ohm ports. Volume can be changed locally or remotely. Volume remains constant over the phone line.

For a complete programming manual for the RNT 2700 please contact Premier or support@premtech.com

REMOTE OPERATION

- 1.) Dial the phone number of the phone line that the RNT is connected to. The RNT will answer on the programmed number of rings (factory default is 1 ring).
- 2.) The RNT will answer the call and begin playing the recorded message. If no message is recorded the RNT will beep.
- 3.) If the RNT is playing a message, press the (*) star key to abort message playing. You may need to do this more than once if a loud passage is playing. (Only do this if a message is playing). The unit will beep when it is ready to receive the security code password.
- 4.) All units are shipped with a default security code password of 1,2,3,4,5. Enter the password from the telephone keypad. The unit will say "enter function" and will beep indicating that it has accepted the password. Program mode has now been entered. If an incorrect code is entered, the RNT will generate a multiple beep error tone.

QUICK PROGRAM INSTALL

NOTE: When first entering program, all record, play and erase functions pertain to the on-hold message.

1. **PRESS 1** to record a test on-hold message.
~RNT says "record" and beeps.
2. **SAY "TEST MESSAGE"** into the telephone, then press (*) star key to stop recording.
~ RNT will beep.
3. **PRESS 2** to play back the message.
~RNT will beep and play back the test message.
4. **PRESS 6** to change number of ring to answer.
~RNT says "enter ring" and beeps.
5. **PRESS 6** to answer in six rings.
~RNT says "ring is 6" and beeps.
6. **PRESS 8** to change programming mode.
~RNT says "enter function" and beeps.
7. **PRESS 2** to change to phone message mode.
~RNT says "function 1,8 on" and beeps.
8. **PRESS 1** to record a test phone message.
~RNT says "record" and beeps.
9. **SAY "PHONE TEST MESSAGE"** into the telephone, then press (*) star key to stop recording.
~RNT will beep.
10. **PRESS 2** to play back the phone message.
~RNT will beep and play back the test phone message.
11. **PRESS 4** to disconnect.
~RNT will beep and then hang up.

FREQUENTLY ASKED QUESTIONS

- Q: How do I reset the RNT?
 A: Power the unit down
 -While powering unit up, hold the volume down switches in.
 -Wait about 3 seconds the release volume down switches.
 -Unit will be reset, audio will be gone.
- Q: I cannot connect to the RNT unit.
 A: Is the clock correct?
 -Is it during business hours?
 -Is the schedule correct?
 -Is the security code correct?
- Q: The fax machine doesn't work.
 A: The fax port is not used on the RNT.
- Q: The audio outputs are noisy, scratchy or low.
 A: Be sure the connection to the punchdown is a solid core wire, not a standard wire.

