


RUF 2700 SERIES

QUICK INSTALL GUIDE

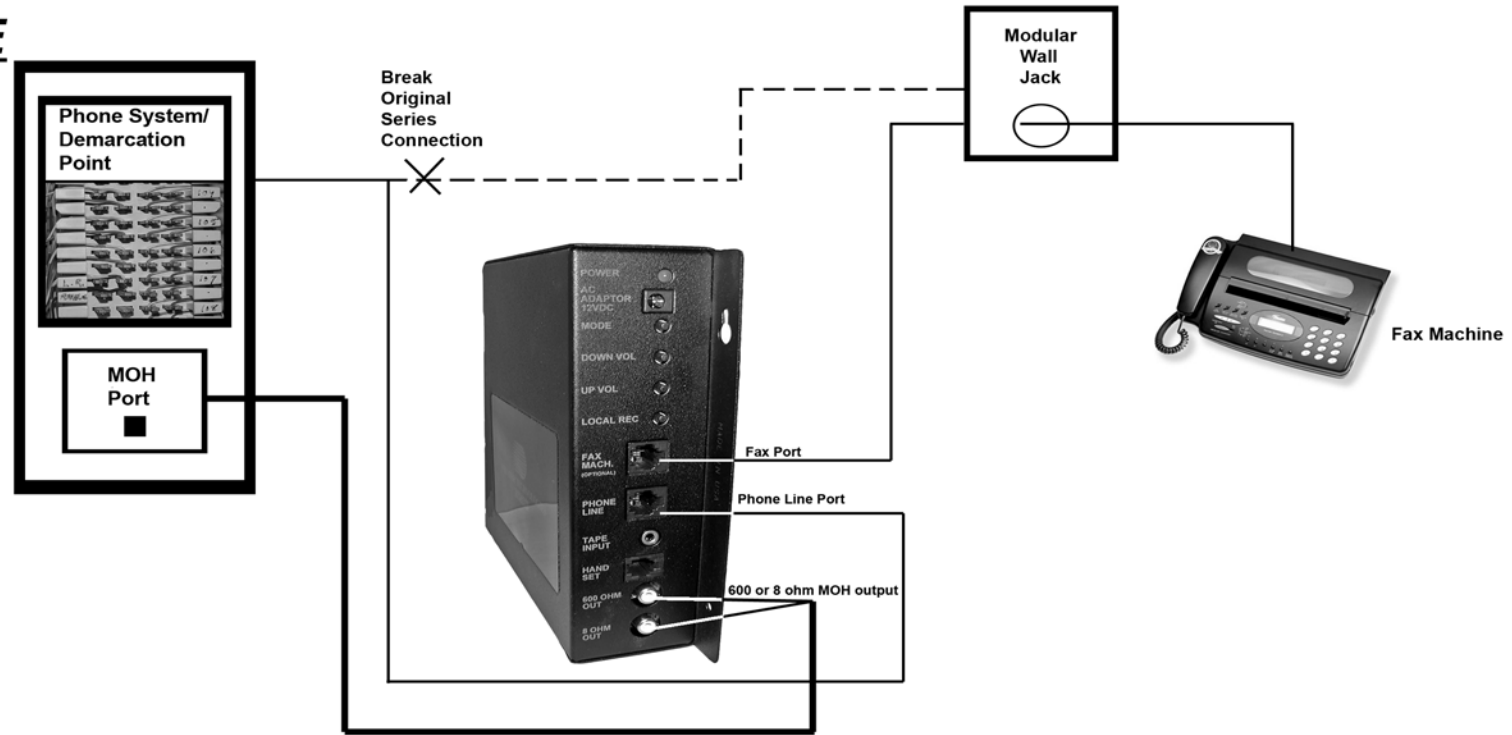

INSTALLATION INSTRUCTIONS

1. Mount unit to the wall, plug in power, and connect the 600 ohm port to the phone system MOH port (use 8 ohm if volume can not be adjusted loud enough).
2. **IMPORTANT: RUF unit must be the first device in line and in series with the fax machine. If client has DSL, install player after the DSL filter.**
3. Find the telephone line going to the fax on the punch down block.
4. Remove this line from the punch down block and attach an RJ-11 modular plug to the end you just removed.
5. Plug this line's new RJ-11 modular plug into the "fax machine" slot of the RUF unit.
6. Run a new wire with an RJ-11 plug on the end back to the punch down block where the fax line was connected. Plug the RJ-11 plug into the "phone" input on the unit.

FREQUENTLY ASKED QUESTIONS

- Q: I cannot connect to the RUF unit.
A: If you have a DSL line, you need an analog filter.
- Q: The RUF is installed parallel, why isn't it working?
A: The RUF must be installed in series.
- Q: The RUF unit is clicking repeatedly.
A: The fax line and phone lines are switched.
- Q: I have a 4 in 1 fax machine (copy, fax, printer, scanner) how many rings should it be set to answer on?
A: It should be set to answer on 1 ring.
- Q: There is no audio coming from the RUF?
A: Is the volume turned up?
-Are you using the correct cable for connection to phone system?
-Use headphones with an RCA connector to listen to 600 or 8 ohm outputs.
- Q: The audio outputs are noisy, scratchy or low.
A: Be sure the connection to the punchdown is a solid core wire, not a standard wire.
- Q: How do I reset the RUF?
A: Power the unit down
-While powering unit up, hold the volume up and volume down switches in.
-Wait about 3 seconds then release volume up and volume down switches.
-Unit will be reset, audio will be gone.
- Q: How do I Factory Reset the RUF unit?
A: -Unplug power cord from RUF.
-Press and HOLD both the Up and Down volume buttons.
-Continue holding in the volume buttons and plug the power cord back into RUF.
-Wait 5 seconds, then release volume buttons.
-RUF is reset, all audio and programming is erased.



800.466.8642

Premier Technologies
One Premier Drive
P.O. Box 159
Long Lake, MN 55356

